

Panasonic

Quick Reference Guide

Proprietary Telephone Model No. **KX-AT7730**

Thank you for purchasing this Panasonic product.

Please read this manual carefully before using this product and save this manual for future use.

IMPORTANT NOTICE:

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in an emergency.

Note

- In this manual, the suffix of each model number is omitted.
- The illustrations may differ from the appearance of the actual product.
- For details, refer to the instructions for analogue proprietary telephones (such as the KX-T7700 series) in the Main Unit/PBX Manuals.

Important Information

For Users in the European Countries

This product is intended to be connected to Panasonic KX series PBX only. For information of Compliance with EU relevant Regulatory Directives, Contact to Authorized Representative:

Panasonic Testing Centre

Panasonic Marketing Europe GmbH

Winsbergring 15, 22525 Hamburg, Germany

For Users in the United Kingdom


 This unit is capable of being used in conjunction with hearing aids fitted with inductive coil pick-ups. The handset should be held as for normal conversation. For operation, the hearing aid should be set to its "T" position or as directed in the operating instructions for the hearing aid.



- This unit is designed to aid the visually handicapped to locate dial keys and buttons.
- This unit is designed to be installed under controlled conditions of ambient temperature and a relative humidity.
- Avoid installing the unit in damp or humid environments, such as bathrooms or swimming pools.
- 999 and 112 can be dialed on the product after accessing the outside line for the purpose of making outgoing calls to the BT emergency (999) and (112) services.

Location of Controls

RINGER Volume Selector

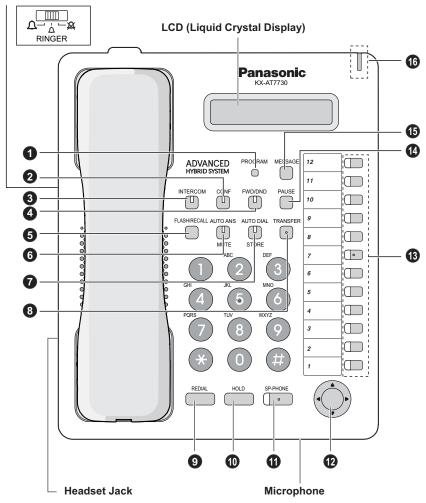

* The headsets can be used with this unit. (Not all operations with the headsets can be guaranteed.)

For up-to-date information about headsets that have been tested with this unit, refer to the following web sites:

https://panasonic.net/cns/pcc/support/pbx/

Location of Controls

- **PROGRAM:** Used to enter and exit the programming mode.
- **2 CONF (Conference):** Used to establish a multiple party conversation.
- 3 INTERCOM: Used to make or receive intercom calls.
- FWD/DND (Call Forwarding/Do Not Disturb): Used to perform Call Forwarding or Do Not Disturb.
- FLASH/RECALL: Used to disconnect the current call and make another call without hanging up.
- 6 AUTO ANS (Auto Answer):
 Used to receive an incoming call in the hands-free mode.

MUTE: Used to mute the microphone during a conversation.

- **AUTO DIAL/STORE:** Used for speed dialing or storing program changes.
- **8 TRANSFER:** Used to transfer a call to another party.
- 9 REDIAL (ordinarily): Used to redial.
- **10 HOLD:** Used to place a call on hold.
- **SP-PHONE (Speaker Phone):** Used for the hands-free operation.

- Navigator Key: Used to adjust the volume and the display contrast or select desired items for each function.
- 13 Flexible Outside (CO) Line Button:
 Used to make or receive an outside call.
 Pressing this button seizes an idle outside
 line automatically. (Button assignment is
 required.) Also used as the desired
 function buttons. (Button assignment is
 required.)
- PAUSE: Used to insert a pause during dialing.
- **MESSAGE:** Used to leave a message waiting indication or call back the party who left the message waiting indication.
- **16** Message/Ringer Lamp: The Message/ Ringer lamp informs you visually that you have a message or a call.
 - When you receive a call, the lamp flashes depending on the ringing pattern. When someone has left you a message, the lamp is lit continuously.
 - When the ringing pattern is set to Single (Slow flash), Double (Moderate flash), or Triple (Rapid flash) in your PBX, the lamp flashes. When the other ringing patterns are set in your PBX, the lamp may not flash. (e.g., S-Double, Call Waiting Tone1).

Initial Settings

♦ Speaker volume *

While in on-hook or during a conversation







Press SP-PHONE.

Press Up or Down.

◆ Handset/Headset volume *

While using a handset or headset



Press Up or Down.

♠ Ringer volume

While in on-hook or receiving a call



Slide the lever of the **RINGER** Volume Selector to the desired setting (**HIGH/LOW/OFF**).

♦ Display contrast *

While in on-hook or receiving a call




Press Left or Right.

^{*} The above settings may return to default settings if the telephone line cord is disconnected or the main unit's power is interrupted.


 $\stackrel{\text{co}}{\bigsqcup} \ \, \text{Outside (CO) Line button} \ \, \stackrel{\text{co}}{\blacktriangleright} \ \, \text{Off-hook} \ \, \stackrel{\text{co}}{\blacktriangleright} \ \, \text{On-hook} \ \, \stackrel{\text{co}}{\bigsqcup} \ \, \text{Feature number} \ \, \left\{ \stackrel{\text{c}}{\bigsqcup} \right\} \ \, \text{Talk}$


Desired Function	Operation
	Making Calls
Calling	To an extension To an external party To an external party □ □ ▶ phone no. ▶ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □
Redial	► REDIAL ► G(1/2)
One-touch Dialing	To program PROGRAM □ ► □ ► 2 phone no. ► □ STORE AUTO DIAL PROGRAM STORE
	To dial Solution To dial Solution
Calling an operator	> • • • • • • • • • • • • • • • • • • •
Personal Speed Dialing	To set XX-TE Series
	** KX-TDA (excl. KX-TDA100D)/ KX-TDE/KX-NS/ KX-NCP/KX-NSX Series (Check the type of your Main Unit.)
System Speed Dialing	To dial AUTO DIAL STORE System speed dial no. ► ((1)

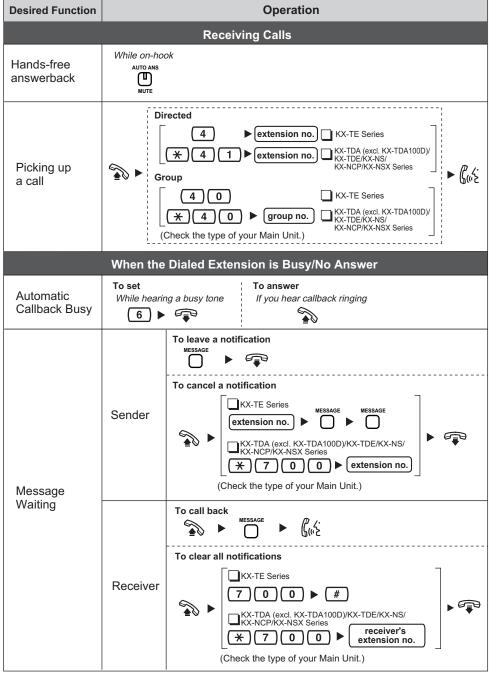

		Operation
	When the	Dialed Extension is Busy/No Answer
	Sender	While hearing a busy tone 2
Call Waiting	Receiver	KX-TE Series For outside calls To ancel For intercom calls/doorphone calls To ancel For intercom calls/doorphone calls To ancel For intercom calls To ancel For outside calls To ancel To

Desired Function	Operation			
During a Conversation				
Holding a call	Holding To retrieve a call at the holding extension NTERCOM ((c) To retrieve an outside call from another extension ((c) ((c)			
Holding a call exclusively	Holding To retrieve a call on exclusive hold Note: The property of the prop			
Transferring a call	to an extension co phone no. to an external party to an external party			
Useful Features				
Paging	To page KX-TE Series All extensions 3 3 0 Group 3 3 group no. All external speakers 3 4 All extensions & external speakers 3 3 ** KX-TDA (excl. KX-TDA100D)/KX-TDE/KX-NS/KX-NCP/KX-NSX Series ** ** ** ** ** ** ** ** **			
Three-party conference	third party's no. ► CONF			

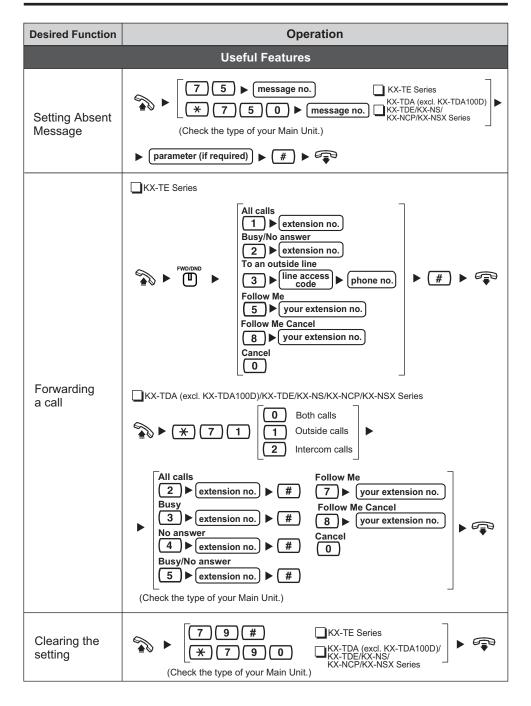

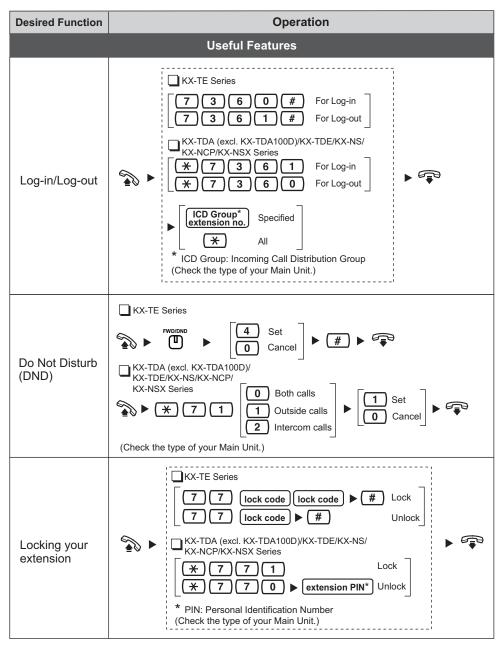


^{*} Consult your dealer for more details about the feature access numbers.

Connection

Note

 Panasonic assumes no responsibility for injuries or property damage resulting from failures arising out of improper installation or operation inconsistent with this documentation.

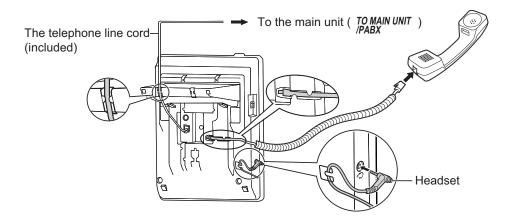


CAUTION

Ensure the cord is inserted in the groove to prevent damage to the connector.




Wall Mounting


1 Pull down the handset hook until it locks, so the tab holds the handset.

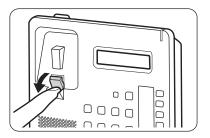


2 Remove the attached stand.

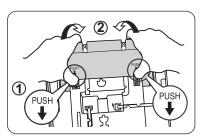

3 Mount the unit on the wall.

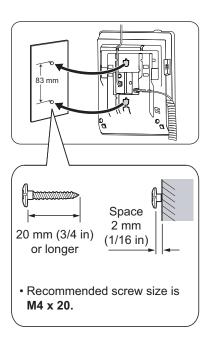

To temporarily place the handset down during a conversation, hook it over the top edge of the phone as shown.

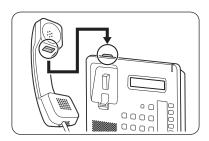

Note

The tilt angle of the unit can be adjusted.

To adjust the angle, attach the stand to the desired position.

